




Changing Code on SuperSlide II PowerSlide RF Remote Transmitter

© 2003 Kwikkee Products Co., Inc.
Kwikkee #1422273 Rev. 1, 05/03

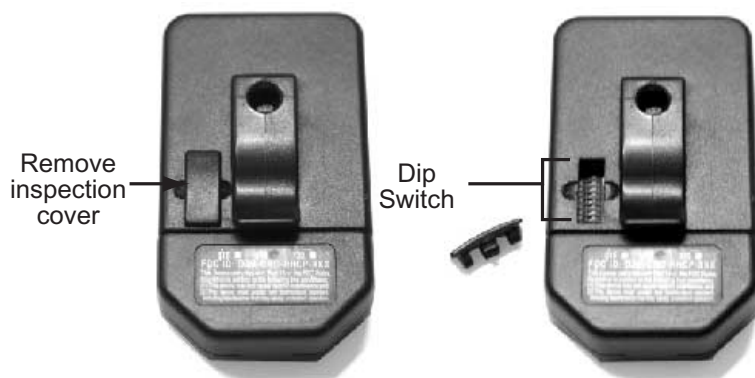

The power slide RF Remote operates on a frequency of 418 MHZ. Each remote may be individually set to operate on a different code setting. The remote comes factory preset to a specific code.

To set a new remote to match the primary remote, remove the inspection cover on the back of the new remote. Adjust the dip switch in the new remote to match the code settings previously copied from the primary remote.

If you have purchased a second remote you will need to change the code in the remote you purchased to match the code settings of your primary remote.

NOTE: *If you are creating a new code you will need to reprogram the Power Slide. Refer to **Figure 5** on Page 3 of the SuperSlide II PowerSlide Assembly Instructions (manual PIN 142275.)*

ON	ON	ON	ON	ON	ON	ON	ON	ON	ON
1	2	3	4	5	6	7	8	9	10

First remove the inspection cover of the primary remote by prying it up at the recessed spots. Write down the remote settings in the diagram provided here.